



## Lanes Brass Resizer

1. Clamp block in a vise

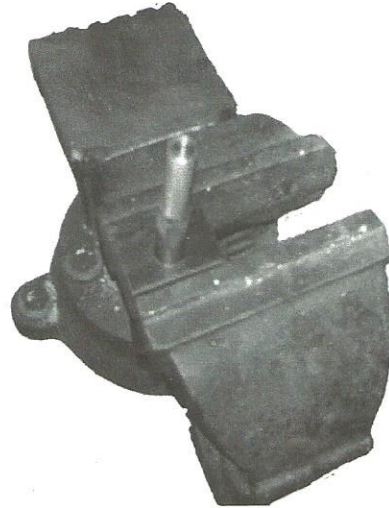

2. Insert the shell to size

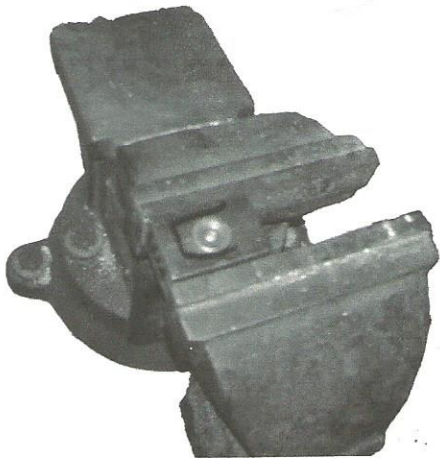

3. Use hammer and lightly tap  
to  
shell in to sizer

4. Use priming tool  
remove

when using sizer make sure you some oil or grease on the brass.

Be careful not hit the shell hard you may damage the rim.